




REPTISUN LED HO

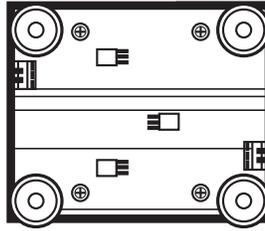

LED MODULE

INSTRUCTIONS

FOR ITEM #'s LF-80, LF-81, LF-82, LF-83
LF-85, LF-86, LF-87, LF-88 and LF-89

Congratulations on your purchase of Zoo Med's **REPTISUN LED HO LED MODULE!** The following instructions will assist you with the proper installation of this product. Please read the following instructions carefully. If you have any questions regarding these instructions or the proper use of this item, please contact our customer service department at zoomed@zoomed.com or by calling (888) 496-6633 (US and Canada only). Customers in other countries, please call (805) 542-9988.

IMPORTANT SAFETY NOTICE!

To reduce the risk of fire, injury, or electric shock, read and follow these instructions prior to operating this light fixture. Save these instructions for future reference.

SAFETY INSTRUCTIONS:

- **DO NOT** exceed electrical rating. Only use the power supply included with this fixture.
- **DO NOT** splice, repair, or modify. Fully extend cord before using.
- **DO NOT** use in wet conditions. Use indoors only. Not for use with aquariums.
- Keep children and pets (other than your terrarium animals) away from fixture.
- **DO NOT** use damaged cord sets – inspect periodically.
- **DO NOT** alter or modify this product. Contact an electrician if you are unsure about the electrical connection.
- This unit uses LED modules that are designed to be replaceable. Do not attempt to replace modules if you are unsure about the proper procedure. Return to Zoo Med for inspection and repair.

CHANGING OR REPLACING THE LED MODULES*:

*Reptisun LED fixture shown. Procedure is similar for Reptisun LED UVB fixture. If you have any questions, contact Zoo Med's customer service department.

The LED modules in your light fixture can be replaced as needed at the end of the LED's useful life.

1. Carefully remove one plastic end cover by extending the sliding rails and removing the four screws using a Phillips screwdriver. Gently pull the end cover away, being careful not to strain the wires.



Step 1

2. Remove the clear splash guard by sliding it out of the grooves.



Step 2

3. Carefully pull the optics off of the LED module that you are removing. Save them for reinstallation on the new module.



Step 3

4. Disconnect the wires from both ends of the LED module and remove the four screws and washers holding it in place. Remove the LED module from the housing.



Step 4a



Step 4b



Step 5

5. Place the new LED module in the same location and orientation as the original module. The text on the LED module should be in the same orientation as the module that was removed. Reinstall screws.
6. Reinstall the optics on the new LED module and reassemble by reversing the steps outlined above. If you have questions, please contact Zoo Med's customer service department.

WARRANTY:

Zoo Med Laboratories, Inc. (Zoo Med) warrants this product to be free of defects in material and workmanship under normal use and service for one year from the date of purchase. The obligation under this warranty is limited to the repair or replacement, at Zoo Med's discretion, of the product or any part thereof, when the product is returned to Zoo Med, freight prepaid. No claim shall be allowed under this warranty if, in the opinion of Zoo Med, this product has been subject to accident or improper usage, including but not limited to: water damage, improper storage, accidental dropping, etc. This warranty is in lieu of all other warranties and representations expressed or implied. Please include your receipt, full name, address, phone number, and email address along with a note explaining failure when sending any product back to Zoo Med. Please allow 4 to 6 weeks for repair or replacement.